

To program a remote you must already have a working remote. If you do not have a working remote you must take the item to a dealership or automotive locksmith for programming.

Procedure 1

1. Insert key into the ignition turn it to the ON position (do not start the car)
2. Press and Hold Unlock on the functioning remote for 10 seconds.
3. While holding the Unlock button press the Panic button for one second. Release both buttons at the same time. Vehicle will chime signaling programming mode.
4. Press any button on the 1st remote to reprogram vehicle will chime again.
5. Press any button on additional remote to program a second remote.
6. Turn off ignition to exit programming.

Procedure 2

1. Insert key into the ignition turn it to the ON position (do not start the car)
2. Press and Hold Unlock on the functioning remote for 10 seconds.
3. While holding the Unlock button press the Panic button for one second. Release both buttons at the same time. Vehicle will chime signaling programming mode.
4. Press the lock and unlock button together on the remote and release. Vehicle will chime press and release the Unlock button and the vehicle will chime again signaling programming.
5. Press and release Lock and Unlock together on the second remote vehicle will chime. Press and release Unlock button on the remote vehicle will chime again signaling successful programming.
6. Turn off ignition to exit programming.