

1. Open the driver's side door.
2. PRESS and HOLD the driver's side door UNLOCK button. Do not release until step 6.
3. Insert the key in the ignition and remote it FIVE times. (you have 10 seconds to do this)
4. Insert the key again (sixth time) and leave it in the ignition. At this time the locks will cycle to confirm the vehicle is in programming mode.
5. Press the LOCK button on the first remote you wish to program. If you want to program additional remotes press the LOCK button on each additional remote.
6. RELEASE the driver's side door UNLOCK button that you have been holding since step 2.
7. Programming is now complete.