- 1. Located the keyless entry main module which is located on the driver's side seat.
- 2. Switch the ignition to the ON position (the position just before starting the car do not start the car)
- 3. Using a paper clip PRESS and HOLD the green programming button on the side of the keyless entry main module. Wait for the lights to flash and RELEASE.
- 4. Holding the remote so the key chain is facing the ground press the top button once. The light will turn off and you will hear a chirp from the vehicle confirming the remote was successfully programmed.
- 5. If you have any other remotes you would like to program repeat steps 3 & 4 if not proceed to step 6.
- 6. Switch the ignition to the OFF position. Programming is now complete.