

1. Turn ignition ON. (The position just before starting the car - do not start the car)
2. Locate and HOLD the valet/disarm button do not release until step 6.(on the dash around the steering wheel).
3. While HOLDING the valet/disarm button wait for the LED on the steering column to flash which indicates that the car is in programming mode.
4. Once the light is flashing press the panic button on the right. This is the top of the 3 buttons if the key chain is facing down. The parking lights will FLASH which confirms that the remote has been programmed successfully.
5. If you have more than one remote repeat step 4 if not proceed to step 6.
6. RELEASE the valet/disarm button.
7. Programming is now complete.