

1. Insert key and turn ignition to ON (position just before starting the car)
2. Press the UNLOCK button on the first remote key you are programming. (use the same remote until step 13 any remote can be used)
3. Turn the ignition to OFF (position where you can remove the key - do not remove the key)
4. Turn ignition to ON (position just before starting the car)
5. Press the UNLOCK button on the first remote key you are programming.
6. Turn the ignition to OFF (position where you can remove the key - do not remove the key)
7. Turn ignition to ON (position just before starting the car)
8. Press the UNLOCK button on the first remote key you are programming.
9. Turn the ignition to OFF (position where you can remove the key - do not remove the key)
10. Turn ignition to ON (position just before starting the car)
11. Press the UNLOCK button on the first remote key you are programming. (the door locks will cycle to confirm the vehicle has entered programming mode)
12. Press the UNLOCK button on the first remote key you are programming (the door locks will cycle again to confirm that the remote has been programmed)
13. Repeat step 12 for each additional remote you want to program.
14. Turn the ignition to OFF and remove key.