

1. Turn ignition to the ON position (the position just before starting the car)
2. Locate the valet/disarm button which is located below the steering wheel. Press and HOLD the button until step 6
4. A light in the dash will flash to confirm the vehicle has entered programming mode.
5. With the remote key chain loop facing downwards press the top button. A light will flash to confirm the remote has been programmed. Repeat this step for any additional remotes that you wish to program.
6. RELEASE the valet/disarm button. Programming is complete.