- 1. Collect all remotes that you wish to program. This procedure will erase all previously programmed remotes. You must program all <u>existing and new remotes</u> that you wish to use on the vehicle at this time.
- 2. Open drive door. Insert key into ignition and turn it to the on position. Do not start the car. Press and hold the programming button located on the bottom to the driver's dash board. Locks will cycle to signal entering into programming mode. Do not release button
- 3. Press top left on the remote being programmed, locks will cycle again. Repeat this step for any additional remotes.
- 4. Release programming button to exit programming mode.