

1. Remove middle vent from the center of dashboard. Locate the traction control connector behind the vent. It will be a 6 pin black connector . Connector will be connected to the vent or traction control switch. If connected to the traction control switch unplug it.
2. Turn key to ON position (this will not start vehicle)
3. Jump pin 1 to pin 4 of the programming connector. Use either a jumper wire or paperclip to connect the two terminals. Must contact the metal surface inside the terminals. locks will cycle from lock to unlock signaling programming mode.
4. Press any button on the remote being programmed lock will cycle again confirming programming. repeat for additional remote.
5. Turn off ignition and remove jumper wire to exit programming.