

1. Insert key and turn from Off to Run 4 times end in run position. Do not start vehicle run is just before starting vehicle.
2. Press any button on the keyless remote , locks will cycle confirming successful programming. Repeat this step for additional remotes.
3. Turn off ignition to exit programming.