

1. Enter the 5 digit code on the keyless entry keypad. Enter the Original Code for the car not a modified code. After entering code press the 1-2 button locks will cycle to confirm programming.
2. Press any button on the keyless remote locks will cycle to confirm successful programming . Repeat for additional remotes.
3. Press the 7-8 and 9-0 buttons together to exit programming.