

1. Insert Key and turn it to the RUN or ACC position (do not start the car.)
2. Locate the programming connector in the left rear quarter panel. Two wires will be leading to the connector with a plastic end , the connector will not be connected to anything. Jump the terminals inside the connector. Use either a jumper wire or bent paperclip. Make contact to the metal inside each terminal. Door will cycle lock to unlock
3. Press any button on the remote being programmed locks will cycle signaling successful programming. Repeat for additional remotes.
4. Turn off ignition remove jumper wire.