

1. Take all remotes out of range of vehicle. Over 20 feet.
2. Turn ignition to the On position, push the Trip/ODO button Twice on the driver information center.
3. Within 5 seconds push and hold the FUEL INFO button on the driver information center until the PKE light comes on.
4. Turn ignition to the OFF position, PKE light will flash.
5. Bring one remote into range. The PKE light will no longer flash but will stay on. This remote has been successfully programmed. Take this remote out of range and the PKE light will flash again Repeat for an additional remotes.
6. Remove key from ignition to exit programming mode.