

1. Turn ignition off
2. Locate programming connector in the trunk. It is a plastic connector with two wires black and white leading to it, the connector will not be connected to anything. Will be located in the center of the rear shelf.
3. Must jump the connectors inside the two terminals of the programming connector. Use a jumper wire or a bent paperclip. Locks will cycle to lock to unlock.
3. Hold lock and unlock on the remote being programmed for 15 seconds. Locks will cycle again confirming programming. Repeat for additional remotes.
4. Remove jumper wire or clip to exit programming mode.