- 1. Collect all remotes that you wish to program. This procedure will erase all previously programmed remotes. You must program all <u>existing and new remotes</u> that you wish to use on the vehicle at this time.
- 2. Open rear hatch and access the trim panel on the driver side. Remove the trim panel located on the wheel well to the tail light. locate the programming connector. It will be a single wire connected to a plastic end. The connector will not be connected to anything.
- 3. Next jump the programming connector using a jumper wire or paperclip. Ground one end of the wire or paperclip to a bolt or metal surface. Connect the other end to the metal pin inside the connector. Locks will cycle from lock to unlock signaling programming mode.
- 4. Press unlock on the remote to be programmed locks will cycle again confirming remote has been programmed successfully. Repeat this step for any additional remotes.
- 5. Remove jumper wire or paper clip to exit programming mode.