

1. Remove Radio fuse box. Fuse is numbered 17
2. Turn key from Off to Run position three times (ending in run). Do not start the Car ,turn to run position this will not start the car. Locks will cycle from lock to unlock signaling entering programming mode.
3. Hold Lock and Unlock on the remote being programmed. Doors will cycle again signaling successful programming. Remote for any additional remotes.
4. Turn off ignition Replace radio fuse.