

1. Collect all remotes that you wish to program. This procedure will erase all previously programmed remotes. You must program all existing and new remotes that you wish to use on the vehicle at this time.
2. Open trunk and access Driver side wheel well. Locate the programming connector. Programming connector will be close to the tail light. Connector should not be connected to anything. It will be a connector with two ports connected to a black and white wire.
3. Next jump the programming connector using a jumper wire or paperclip. Bend the paper clip or use the two ends of the wire to connect the two ports. Must contact the metal connectors inside the ports. Locks will cycle from lock to unlock signaling the entering of programming mode.
4. Press unlock on the remote to be programmed locks will cycle again confirming remote has been programmed successfully. Repeat this step for any additional remotes.
5. Remove jumper wires or paper clip to exit programming mode.