- 1. Collect all remotes that you wish to program. This procedure will erase all previously programmed remotes. You must program all <u>existing and new remotes</u> that you wish to use on the vehicle at this time.
- 2. Open trunk and access Driver side wheel well. Locate the programming connector. This is a plastic port connected to two wires. Will be located behind carpeting or trim connector will not be connected to anything.
- 3. Next jump the programming connector using a jumper wire or paperclip. Bend the paper clip or use the two ends of the wire to connect the two ports. Must contact the metal connectors inside the ports. Locks will cycle from lock to unlock signally the entering of programming mode.
- 4. Press unlock on the remote to be programmed locks will cycle again confirming remote has been programmed successfully. Repeat this step for any additional remotes.
- 5. Remove jumper wires or paper clip to exit programming mode.