

1. Access the keyless module underneath the drivers dashboard above the fuse panel. There will be a black and a white wire leading from the module. Wires may or may not lead to a Valet switch.
2. Insert key into ignition and turn to the On position (Do not start the vehicle.) If the black and white wires leading from the keyless module are connected to a Valet switch press switch 13 times. If wires are not connected to switch you must touch metal of the wire ends together 13 times.
3. Press button 1 on the remote, turn ignition back to Off. Press button 1 on the remote. Doors should cycle from lock to unlock.
4. Turn ignition switch to the On position and press the valet switch or connect the black and white wires 14 times. Press button 2 on the remote.
5. Turn ignition to the Off position, press button 1 on the remote.