- 1. Remove the plate covering the radio, locate the alarm system module and turn memory switch to the Off position.
- 2. Insert key into the ignition and turn it to the On position. Wait 5 seconds and turn the memory switch to the Set position.
- 3. Press lock on the remote being programming and on all additional remotes.
- 4. Turn the memory switch to the off position and turn of ignition.
- 5. Reinstall alarm plate and test remotes.