

1. Remove the plate covering the alarm system control under the steering column, turn memory switch to the Off position.
2. Insert key into the ignition and turn it to the On position. Wait 5 seconds and turn the memory switch to the Set position.
3. Press lock on the remote being programming and on all additional remotes.
4. Turn the memory switch to the off position and turn of ignition.
5. Reinstall alarm plate and test remotes.