

You will first need to locate the keyless entry main computer. The location can vary but it is often found on the left side of the vehicle (driver) behind the quarter panel trim above the speaker but can also be behind the passenger side. Once you find the main computer you will see a switch on it with three positions: FIX, SET 1, SET 2.

1. Turn the switch on the main computer to SET 1
2. PUSH the LOCK button on the first remote you are programming (order does not matter)
3. Turn the switch on the main computer to SET 2
4. PUSH the LOCK button on the second remote you are programming
5. Turn the switch on the main computer to FIX (the original position)
6. Programming is now complete.