

1. Locate the Security Control Unit under the driver seat. Locate the square yellow programming button. The button will be located below the label. Remove the label to access the button.
2. Insert key into the ignition and turn it to the On position and back to Off (do not start the vehicle)
3. Hold down the programming button you will hear four chirps followed by five chirps. This will confirm your vehicle is in programming mode. The vehicle will start emitting a tone every second during programming mode. Press the Arm/ Disarm button on the remote being programmed. Repeat for additional remotes.
3. Turn ignition On then back to Off. Test remotes