

1. Open trunk enter vehicle and close all doors and lock them
2. Insert key and remove key from ignition 6-8 times within ten seconds. Do not turn the key in the ignition.
3. Unlock and Lock the driver's door by hand, do not use power locks.
4. Press lock button on the remote being programmed. Repeat for additional remotes.
5. Unlock drivers door by hand, open and close door to exit programming