

1. Enter vehicle close all doors, lock all doors with power lock button on the driver's door.
2. Insert key into ignition and completely remove from ignition 6 times within ten seconds. Do not turn the key in the ignition.
3. Inset key into ignition and turn it to the ACC position.
4. Press any button on the remote being programmed once, hazard lamps will flash to signal successful programming . For additional remotes lock then unlock doors using switch on drivers door. Press any button on second remote hazards will flash again.
5. Exit programming mode turn key to OFF and remove it. Unlock doors using drivers door unlock switch. Open drivers door.