

1. You must first locate the keyless security main module. This is usually located under the driver's side seat but may be under a different seat. You will see a green button on the module which you will need to press in a later step.
2. INSERT key and turn to ON (the position just before starting the car - do not start the car)
3. Go back under the seat and press the green button on the module with a paper clip. HOLD the button until the LED on the dash lights up.
4. PUSH and RELEASE the top button on the first remote you are programming (order does not matter)
5. If you have additional remotes to program repeat steps 3 and 4 for each remote. If you have no further remotes to program proceed to step 6.
6. Turn ignition to OFF and take key out of ignition. Programming is now complete.